

AnexMINER user manual

1. Ensure that the PC and the device are on the same network
2. Open the client software in the folder
3. Make sure the routing backend miner device is online

名称	修改日期	类型	大小
bearer	2022/6/5 0:51	文件夹	
iconengines	2022/6/5 0:51	文件夹	
imageformats	2022/6/5 0:51	文件夹	
logs	2022/6/5 0:51	文件夹	
platforms	2022/6/5 0:51	文件夹	
sqldrivers	2022/6/5 0:51	文件夹	
styles	2022/6/5 0:51	文件夹	
translations	2022/6/5 0:51	文件夹	
AnexClient	2022/6/4 17:46	应用程序	331 KB
d3dcompiler_47.dll	2020/12/2 5:30	应用程序扩展	4,419 KB
KjClient	2022/6/4 21:17	Data Base File	632 KB
libEGL.dll	2018/12/3 19:28	应用程序扩展	18 KB
libGLSV2.dll	2018/12/3 19:28	应用程序扩展	3,488 KB
opengl32sw.dll	2016/6/14 20:00	应用程序扩展	20,433 KB
Qt5Core.dll	2022/5/29 18:38	应用程序扩展	5,984 KB
Qt5Gui.dll	2018/12/3 19:34	应用程序扩展	6,302 KB
Qt5Network.dll	2018/12/3 19:34	应用程序扩展	1,286 KB
Qt5Sql.dll	2018/12/3 19:31	应用程序扩展	201 KB



Setting

Select	Title	IP initial	IP finishes	New IP	Pool	User	Endings	
				<input type="button" value="New IP"/>	<input type="checkbox"/> 1	<input type="text"/>	<input type="text"/>	<input type="radio"/> Null <input type="radio"/> IP
				<input type="button" value="Delete IP"/>	<input type="checkbox"/> 2	<input type="text"/>	<input type="text"/>	<input type="radio"/> Null <input type="radio"/> IP
				<input type="button" value="Auto"/>	<input type="checkbox"/> 3	<input type="text"/>	<input type="text"/>	<input type="radio"/> Null <input type="radio"/> IP

Automatic Monitoring

Scan

One-click Config

Update

Reboot

Reset

Reset DHCP

Change Password

Add Miner

File Selected:

Selecte File

#	Selecte	Up time	IP	SN	Running state	Mode	State	Device mode	Accepted rate	Hash rate	Pool:1	User:1	Pool:2
---	---------	---------	----	----	---------------	------	-------	-------------	---------------	-----------	--------	--------	--------

1

Click scan mining machine and wait 10-20s



About



Setting

Select	Title	IP initial	IP finishes	New IP	Pool	User	Endings
<input type="checkbox"/>				<input type="checkbox"/>	<input type="text" value="//123.57.174.252:1800"/>	<input type="text" value="anexminer"/>	<input type="radio"/> Null <input type="radio"/> IP
<input type="checkbox"/>				<input type="checkbox"/>			<input type="radio"/> Null <input type="radio"/> IP
<input type="checkbox"/>				<input type="checkbox"/>			<input type="radio"/> Null <input type="radio"/> IP

Buttons: Scan, One-click Config, Update, Reboot, Reset, Reset DHCP, Change Password, Add Miner

File Selected:

#	Select	Up time	IP	SN	Running state	Mode	State	Device mode	Accepted rate	Hash rate	Pool:1	User:1	Pool:2
1	<input checked="" type="checkbox"/>		192.168.10...	192.168.10...	Online	Normal m...			305.00	0.00	stratum+t...	anexminer...	

⑤ Select the scanned IP, ore pool and account

② Fill in ③ and ④ after waiting for the IP address

⑥ One-click configuration

③ Enter the ore pool address here

④ Enter the pool account here

About



Select	Title	IP initial	IP finishes	New IP	Pool	User	Endings	
				<input checked="" type="checkbox"/>	1	//123.57.174.252:1800	anexminer	<input type="radio"/> Null <input type="radio"/> IP
				<input type="checkbox"/>	2			<input type="radio"/> Null <input type="radio"/> IP
				<input type="checkbox"/>	3			<input type="radio"/> Null <input type="radio"/> IP

Buttons: Scan, One-click Config, Update, Reboot, Reset, Reset DHCP, Change Password, Add Miner

File Selected:

#	Selecte	Up time	IP	SN	Running state	Mode	State	Device mode	Accepted rate	Hash rate	Pool:1	User:1	Pool:2
1	<input checked="" type="checkbox"/>		192.168.10...	192.168.10...	Online	Normal mode			305.00	0.00	stratum+t...	anexminer...	

Option

Pool params:

☒ Pool params: anexminer stratum+tcp://123.57.174.252:1800

Work mode:

☒ Work mode: Normal

OK

7

Click one-click configuration and the confirmation option of ore working mode will
Click "OK" to complete the setting.

Select	Title	IP initial	IP finishes	New IP	Pool	User	Endings
<input type="checkbox"/>	1	//123.57.174.252:1800	anexminer	<input type="radio"/> Null <input type="radio"/> IP			
<input type="checkbox"/>	2			<input type="radio"/> Null <input type="radio"/> IP			

Finally, click automatic monitoring to automatically update the real-time information of the device.

File Selected:

#	Select	Up time	IP	SN	Running state	Mode	State	Device mode	Accepted rate	Hash rate	Pool:1	User:1	Pool:2
1	<input checked="" type="checkbox"/>		192.168.10...	192.168.10...	Online	Normal m...			305.00	0.00	stratum+t...	anexminer...	2.50

8 After the configuration is completed, click the scanning miner and wait for about 2-10min, then real-time calculation force and other information will appear